1883530
Manhattan Coffee Table

Parts and Hardware List

A.	Top Assembly	1 pc
B.	Legs	4 pcs
C.	Top Stretcher	1 pc
D.	Bottom Stretcher	1 pc
E.	Finial	1 pc
F.	Long Allen Head Bolt	1 pc
G.	Short Allen Head Bolt	8 pcs
H.	Lock Washer	9 pcs
I.	Flat Washer	9 pcs
J.	Allen Head Wrench	1 pc
K.	Phillips Head Wood Screw	4 pcs
L.	Phillips Head Screwdriver	1 pc

∗ Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
∗ This item should be assembled on a soft surface to prevent scratching of the finish during assembly.
∗ This item may require periodic tightening.

Hardware Illustrations

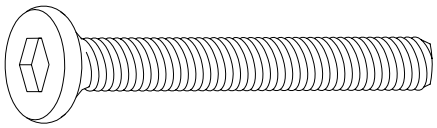

F. Long Allen Head Bolt



I. Flat Washer

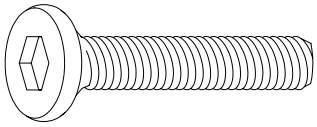

G. Short Allen Head Bolt



H. Lock Washer

K. Phillips Head Wood Screw

1883530
Manhattan Coffee Table

Attach the Finial, Stretchers & Legs

1. **Attach Finial (E) to Stretchers** Place the Top Stretcher (C) over the Bottom Stretcher (D) to make a cross. Align the pre-threaded hole of the Finial (E) to the pre-drilled hole on the Top Stretcher (C). Secure from the bottom with the Long Allen Head Bolt (F), Lock Washer (H) and Flat Washer (I) using the Allen Head Wrench (J). See Illustration #1

2. **Attach Legs (B) to Top Assembly (A)** Place the Top Assembly (A) upside down on the floor. Align the pre-drilled holes of **two** Legs (B) with the pre-threaded holes on the curved apron. Secure each leg with two Short Allen Head Bolts (G), Lock Washers (H) and Flat Washers (I) using the Allen Head Wrench (J). **Do not fully tighten at this point**.

3. **Attach Stretchers to Legs (B)** Turn the stretcher upside down. **Insert the exposed dowels on stretchers into the pre-drilled holes on the two Legs (B) that you attached to the Top Assembly (A).** Secure with Phillips Head Wood Screws (K) using the Phillips Head Screwdriver (L).

4. **Attach remaining Legs (B)** Finally, align the pre-drilled holes of the remaining Legs (B) with the pre-threaded holes on the apron. Secure with Allen Head Bolts (G), Lock Washers (H) and Flat Washers (I) using the Allen Head Wrench (J). Repeat Step 3 to attach stretchers to legs. **Now tighten all the Allen Head Bolts (E).** See Illustration # 2

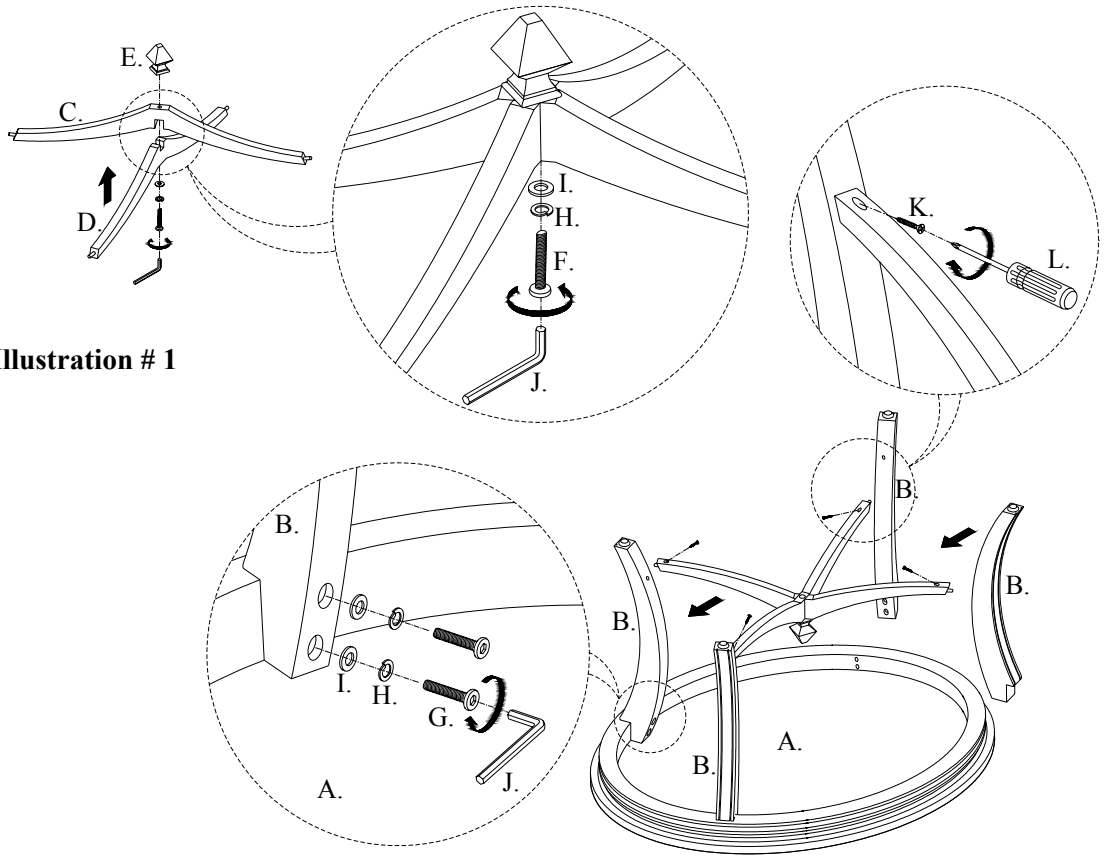

Illustration # 1

Illustration # 2

R1-11-5-03